




Installation Guide

Adaptive Force Control Component Locations for Hyster S120


This sheet provides a pictorial guide for the installation of Adaptive Force Control components. The truck that the components are being installed on may have additional accessories that require the location of the parts shown be moved to an alternate location. The components should be installed as described in their appropriate installation instructions.




Priority Flow Control Valve

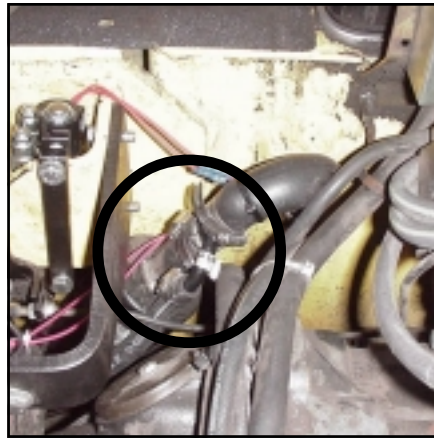

Return to Tank Fitting

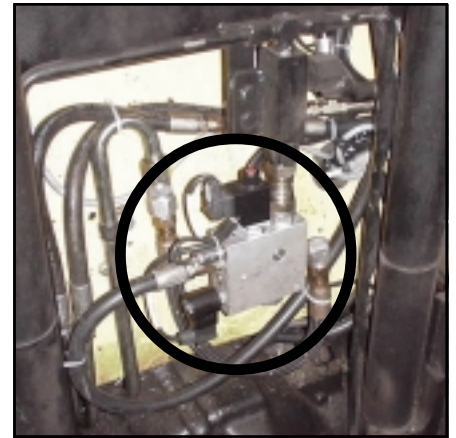

Hoist Drop Stop Valve

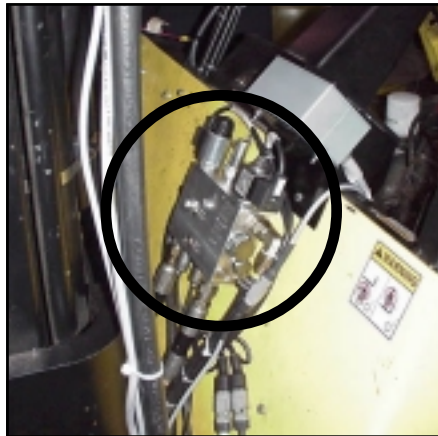

Proportional Flow Valve



Accumulator
(Mounted Using Hyster 340054 Spacers)



Controller

cascade[®]
corporation

For Technical Support . . .

Call: 1-800-227-2233

OR

Write: Cascade Corporation, P.O. Box 20187, Portland, OR 97294

To Order Parts . . .


Call: 1-888-227-2233

OR


Write: Cascade Corporation, 2501 Sheridan Ave., Springfield, OH 45505




Display

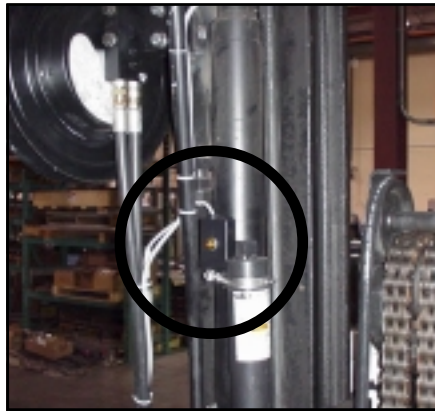

Clamp Ready Light

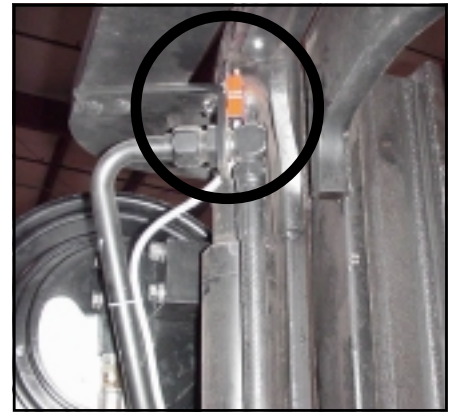


Freelift Limit Switch

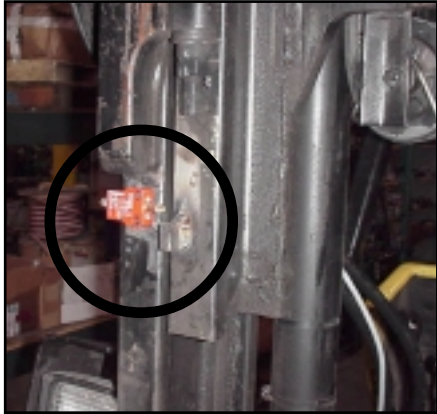


Maximum Lift Limit Switch



Drop Stop Switch

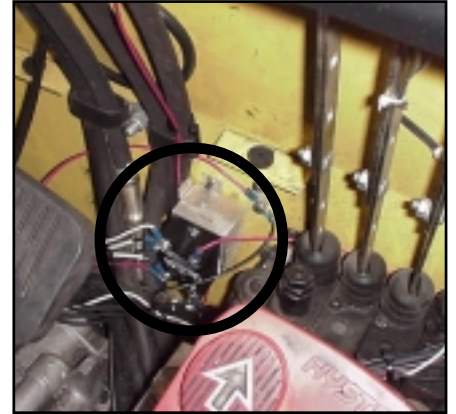

Relay

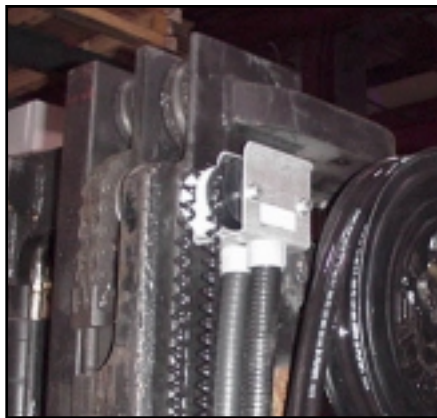

Power Supply



Cowl Hole for Cables




Tilt Control Valve (if equipped)



Tilt Control Arm (if equipped)



Tilt Control Junction (if equipped)

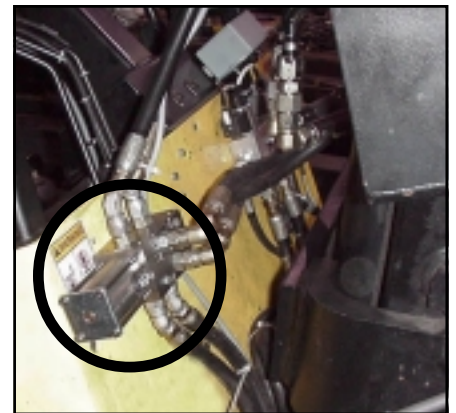

Solenoid Valve (if equipped)