




Installation Instructions

Split Long Arm Revolving Connection Quad Ring Service Kit 6038845

This sheet provides installation instructions for Quad Ring Service Kit 6038845. The quad ring installs on a spool that activates a sequence cartridge.

- 1 Lubricate the spool with hydraulic oil. Install the quad ring on the spool. Make sure the ring is fully seated and not twisted.
- 2 Lubricate the port and install the spool with the nose outward to engage the sequence cartridge.

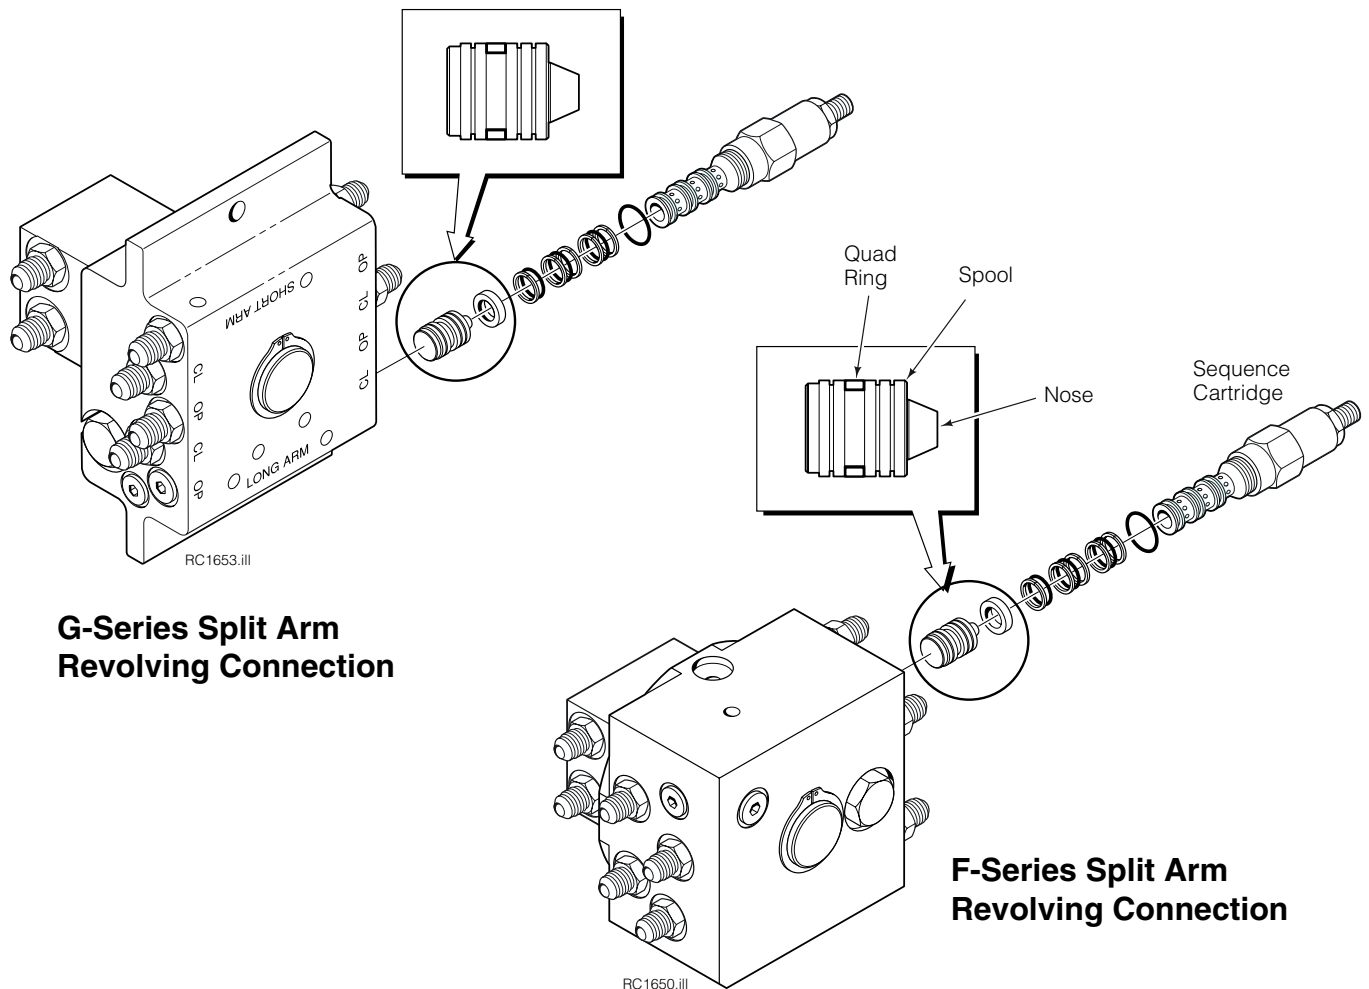

**G-Series Split Arm
Revolving Connection**

**F-Series Split Arm
Revolving Connection**

cascade[®]
corporation

For Technical Support . . .

Call: 1-800-227-2233

OR

Write: Cascade Corporation, P.O. Box 20187, Portland, OR 97294

To Order Parts . . .

Call: 1-888-227-2233

OR

Write: Cascade Corporation, 2501 Sheridan Ave., Springfield, OH 45505