
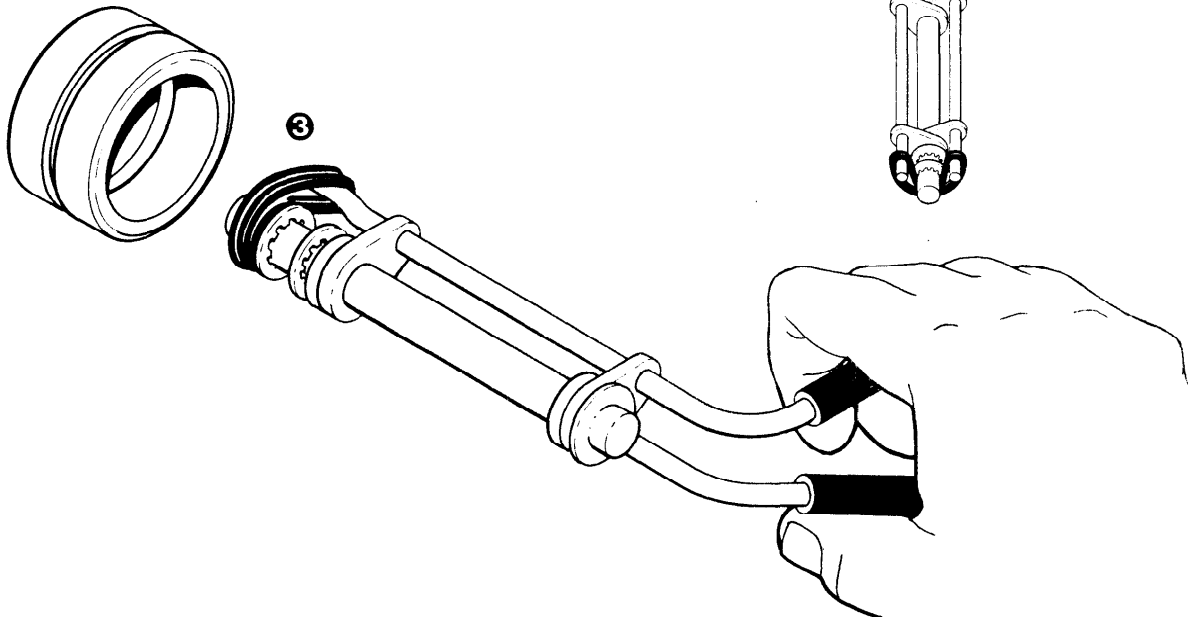
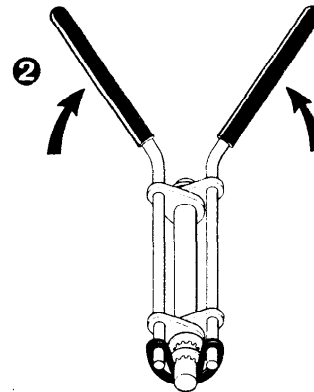


Technical Bulletin

Rod Seal Installation Tool Kit 599516

This sheet provides instructions for seal installation using Cascade Seal Installation Tool Kit 599516. The kit includes three tools for 1" to 1-1/2", 1-1/2" to 2", and 2" and over shaft seals.

- 1 Place the seal on a flat surface with the seal lip down. Open the tool so that the center pin is outside the seal O.D. and the handle pins are inside the I.D.
- 2 Rotate the handles to deform the seal.
- 3 Install the seal into the groove from the external end of the bore. Release pressure and remove tool. With finger pressure, snap the remaining part of the seal into the groove.

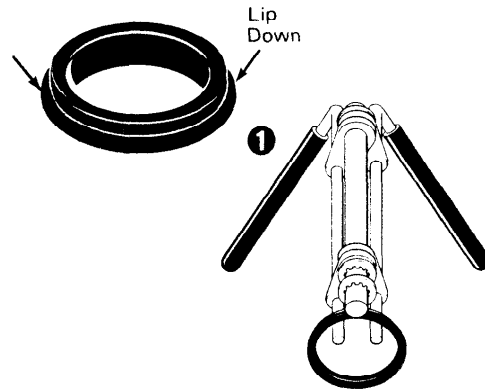

NOTE: This information should not be interpreted as the basis for warranty claims unless so designated.

Part No. 599517

cascade[®] corporation

For Technical Assistance . . .

Call/ 1-800-CASCADE or 503-669-6300

OR

Write: Cascade Corporation, P.O. Box 20187, Portland, OR 97220

To Order Parts . . .

Call: 513-322-1199

OR

Write: Cascade Corporation, P.O. Box 360, Springfield, OH 45505