



APPLICATIONS

Use in conjunction with a solenoid to control two functions with one handle or switch. Cascade offers two handle switches for operator control. Use the switch design best suited for the truck handle configuration.

WHEN TO USE THE KNOB

 For trucks featuring cowl-mounted handles with sufficient room for the knob.


WHEN TO USE THE SWITCH

- For trucks featuring closely nested control handles with no room for a knob.
- When the knob is not easily adapted to the handle configuration.

OPTIONS

- Available for two or three function Cascade attachments.
- 12 volt/5 amp
- 24-48 volt/2 amp




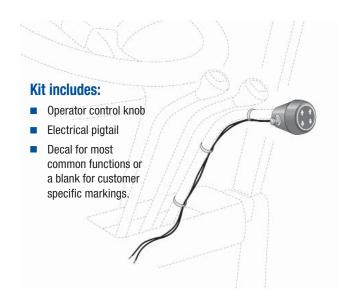

Control Knob Kit For Solenoid Adaption

In conjunction with the solenoid adaption, provides for controlling two or three function attachments with one auxiliary valve.


- ▶ Button type is "normally open".
- ► For handles spread sufficiently for knob, use knob. For closely nested handles with no room for a knob, use switch (right).

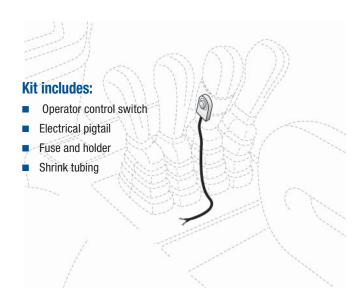

Low Profile Switch Kit For Solenoid Adaption

In conjunction with the solenoid adaption, provides for controlling two or three function attachments with one auxiliary valve.


► Switch type is "normally open".

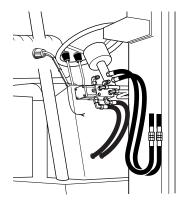

Truck Mounted Solenoid Adaption Group (Knob)

Permits the use of a single function auxiliary valve to control multiple function attachments. Mounts on truck cowl. Includes solenoid valve, control knob with push button, wiring and fittings.

IMPORTANT: Solenoid voltage must match truck voltage.

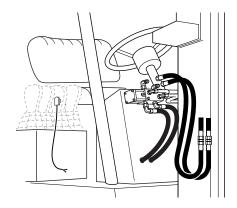

Truck Mounted Solenoid Adaption Group (Switch)

Permits the use of a single function auxiliary valve to control multiple function attachments. Mounts on truck cowl. Includes solenoid valve, control switch with push button, wiring and fittings.

IMPORTANT: Solenoid voltage must match truck voltage.



corporation