


PRINT WEIGHT (PRINTER EQUIPPED)

1 Position load on forks

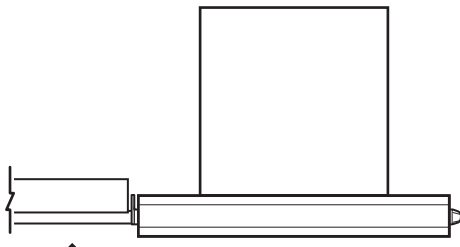

2 Raise load off ground

FK0971.ai

NOTE: If Totaling (Accumulation), pressing the "ON/PRINT" button will print the load's weight information and then add the weight to the total weight. To print total weight, hold the "ON/PRINT" Button for three seconds, then, while indicator flashes press the "ON/PRINT" Button again.

The indicator can be toggled between lbs and kg. Refer to Indicator Functions section in the user manual (part no. 8314244). Printer output is in units selected during calibration.

3 Press the "ON/PRINT" button to print.

ID. No.	123456
GROSS	250.0 lb.
TARE	50 lb.
NET	200.0 lb.
DATE	09/15/2020

4 Printer will print out load weight


FK0972.ai

OPERATOR'S POCKET GUIDE

C-Series

Order Picker Weigh Forks

INDICATOR FUNCTIONS

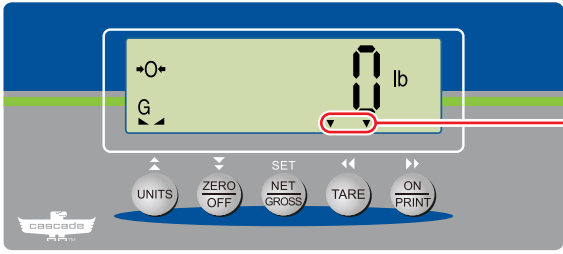

If equipped with Weight Threshold Indicator features, when load weight reaches or exceeds a specified weight:

- When first arrow appears, an audible alert sounds.
- When second arrow appears, a message is sent out to the server.

FK0979.ai

KEY: Short Button Press
Long Button Press Option

- UNITS** (N/A) - Toggle Units
- ZERO OFF** (Turn Indicator Off) - Zero
- NET GROSS** (N/A) - Toggle between Gross & Net weight
- TARE** (N/A) - Establish or Cancel Tare Weight
- ON PRINT** (Turn Indicator On) - Print Weight

Manual Number 6963903



NOTE: For more information on display functions, refer to the C-Series Order Picker Weigh Forks User Manual 8314244.

NO RIDERS




NO UNDER LOAD



No Stand Zone

LOAD HANDLING

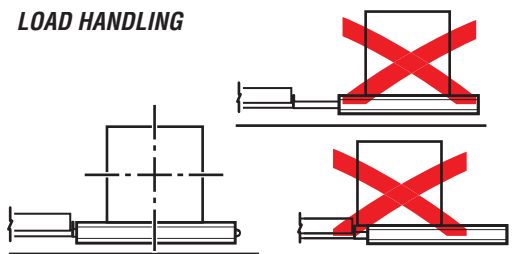


FK0966.ai

IMPORTANT:

- At initial daily start up, allow 3-5 minutes for the forks to warm up before weighing loads.
- The system will not weigh correctly if the front face of the operator platform or bottom of the forks touches the load and pallet.
- Unstable weight readings indicate debris between fork and fork shoe.
- When weighing liquids, more time is needed for indicator to show a steady weight.
- Do not exceed fork length by more than 6 in. (152 mm) with load length.

Prior To Weighing

Verify forks are free of obstacles prior to zeroing.

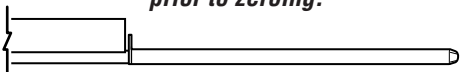


FK0968.ai

For legal trade:
±5% (3°) Horizontal

Working temperature range:
-4° F (-20° C) minimum
105° F (40° C) maximum


If equipped with indicator heater:
-40° F (-40° C) minimum

2 Position load on forks, raise forks

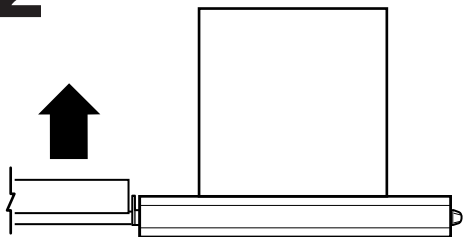


FK0967.ai

4 Remove load

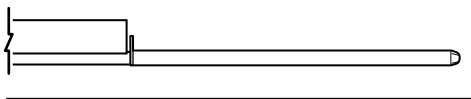

FK0968.ai

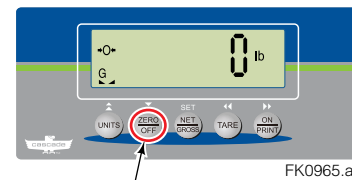


FK0965.ai

1 If necessary, zero the display manually.


The indicator can be toggled between lbs and kg. Refer to Indicator Functions section in the user manual (part no. 8314244). Printer output is in units selected during calibration.

3 The load's weight will show on the indicator. As needed, allow for more time to show a steady weight.

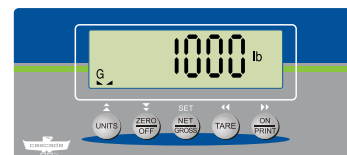

FK0969.ai

5 Before next weighing, verify that the indicator is zeroed.

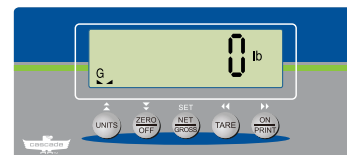

FK0970.ai