

# ***OPERATOR'S GUIDE***

---

## ***Weigh2Go***

### ***Mobile Weighing App***

***IMPORTANT: Weight values represented or shared through the Weigh2Go App have not yet been approved by legal authorities for use in commerce.***

***Manual Number 6987906***

**cascade<sup>®</sup>  
corporation**

Cascade is a Registered Trademark of Cascade Corporation

# CONTENTS

---

|                       |          |
|-----------------------|----------|
| Important Information | <i>i</i> |
| Quick Start           | 1        |
| Main Menu             | 2        |
| Menus                 |          |
| Settings              | 2        |
| Start Weighing        | 3        |
| Weighing History      | 4        |
| Test                  | 5        |

## IMPORTANT INFORMATION

---

### Use

This application (app) is available for free use and is intended to be used with Cascade Mobile Weighing units with a compatible Bluetooth data output.

Cascade does not retain nor stores the data collected using this app. Data output and retention is at the sole discretion of the end user.

**NOTE:** This app is recommended to be used on a tablet.


### Data

The mobile weighing indicator display must have Parameter A6 set to "7". For navigating and changing the setting, refer to the service manual.


### Scan Devices

A scan device can be connected to a tablet for assigning field data to weight data. When in use, the scan device works in place of keyboard. **Refer to the scanner manufacture's manual for pairing with the tablet.**

# QUICK START

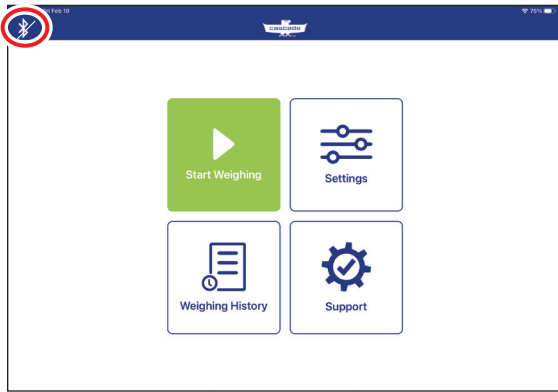


**1** Tap the Bluetooth icon located in the upper left of the screen

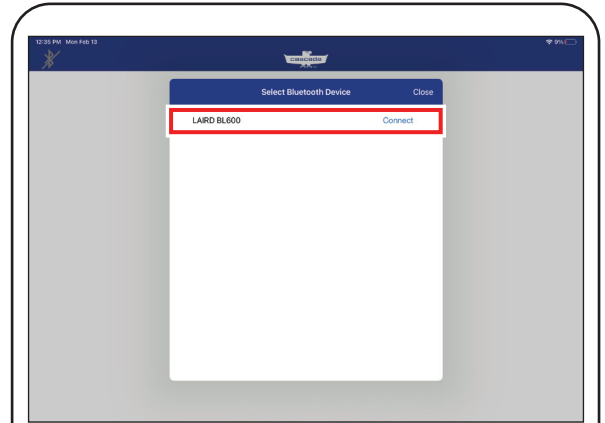


**2** A pop-up will appear. Choose a Display Indicator from the list.

**NOTE:** The display indicator must be on.

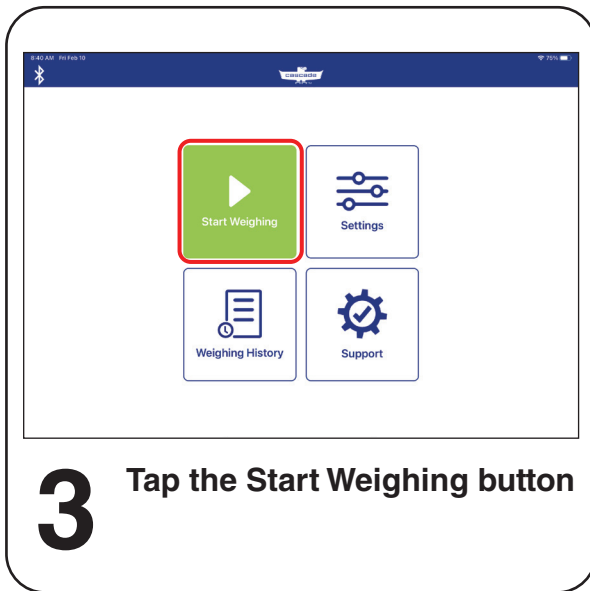


**3** Tap the Start Weighing button

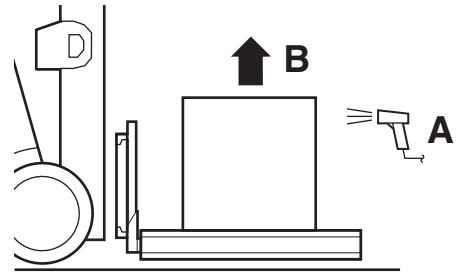

**4** Scan (if equipped) and weigh a load

**A** Scan the load. Alternatively, enter the load's ID using the tablet's keyboard.

**B** Position the load on the forks and raise the forks.

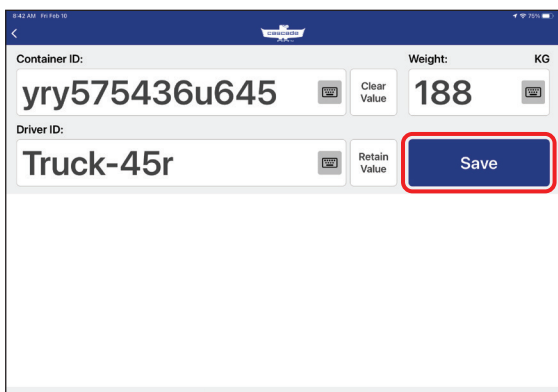

**5** Capture and save weight

AC3738.ai

# MAIN MENU

## Bluetooth Icon


The icon shows that the app is connected or disconnected to a indicator display. Tap this icon to connect a Display Indicator. Refer to the section below.

## Start Weighing Menu

Tap this button to view and capture data in the App. Refer to page 3.

## Weighing History Menu

Tap this button to review load weight history. Refer to page 4.

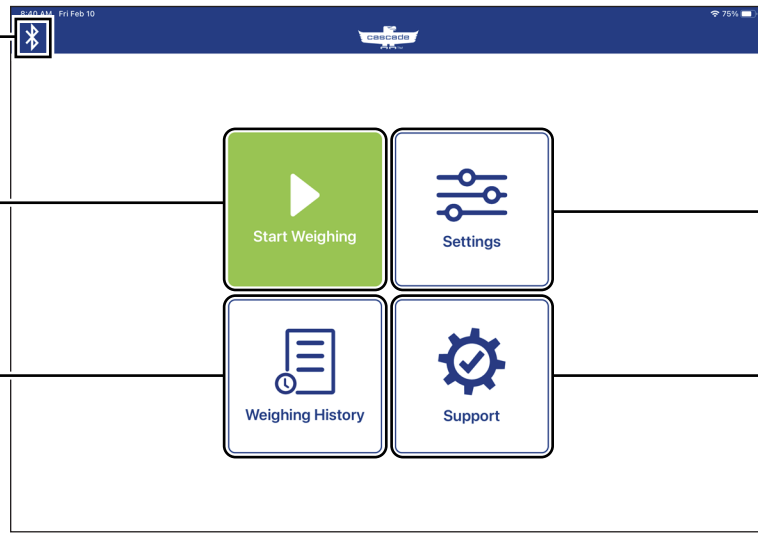

## Settings Menu

Tap this button to change field names in Start Weighing Menu and data output management. Refer to the section below.

## Support Menu

Tap this button as a quick reference for using the app.

# MENUS


## Settings

### Start Weighing Menu Field Titles (optional)

To change the name of the fields on the Start Weighing Menu, tap the name of the field shown. Use the tablet's keyboard to change a field title.

#### Example:

Field #1 is set to "Container ID" and Field #2 is set to "Driver ID". When in the "Start Weighing" menu, the driver will input (or scan) a load's ID and driver's name. The values and weight value will be exported together.

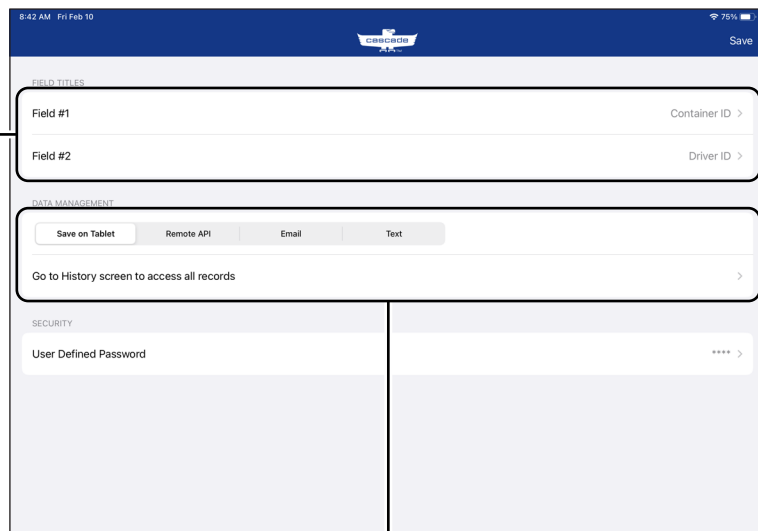

### There are four options for exporting load data:

- **Save on Tablet** – Select to keep data on the tablet.
- **Remote API** – Select and add an API to push the data to.  
**NOTE:** The tablet must be connect to a network (wifi or cellular) to use this feature. API address is provided by end user.
- **Email** – Select and add an email to send each data to.
- **Text** – Select and add a phone number to text the data to.

# MENUS

## Start Weighing

**Field #1  
(optional input)**

**Field #2  
(optional input)**

To add a value to Field #1 or Field#2, tap the input box and use a scanner or tablet's keyboard to input the value.

**Weight Field**  
Shows the weight of the weighed load.

**Save Button**  
Records data from the three fields, date and time.

**TOGGLE:**  
**Clear Value**  
Clears the current value.

**Retain Value**  
Keeps the current value for the next weight.

**Status Table**  
A list of recent load data and the status of the data.

## Weighing History

### Review Data

The "Weighing History" menu is available for quick reference and can be exported.

### Delete Weight History

To delete weight history:


- A** Tap the "Select all" button or select individual entries.
- B** Then, tap the "Delete" button.




### Share Weight History

- A** Tap the "Select all" button or select individual entries.
- B** Tap the "Share" button. The selected weight history is compiled into cvs file.

- C** Choose a share option. The file can be sent through the device's available sharing options (different from the app's settings).

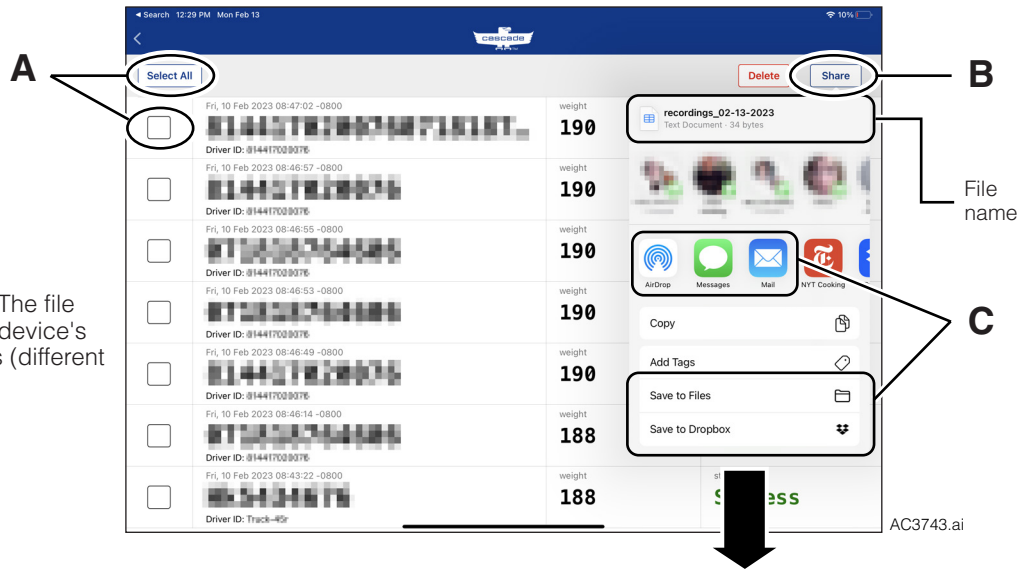

- D** To view the file, open the cvs file using spreadsheet software.

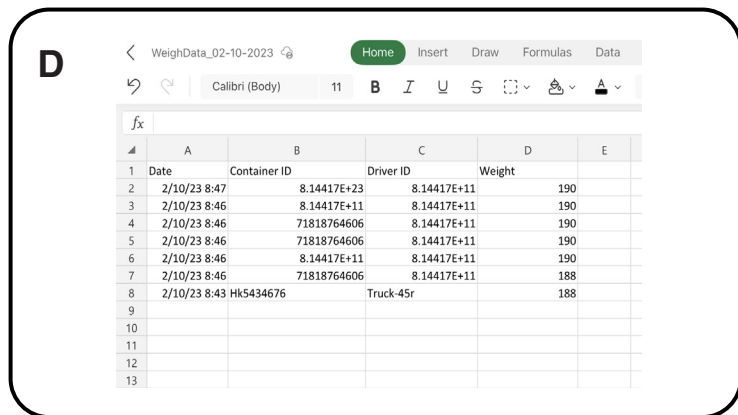



## Scanner Device

This page is provided to test the scanner device with app.

This field is automatically selected.

Tap this field to select.

AC3744.ai

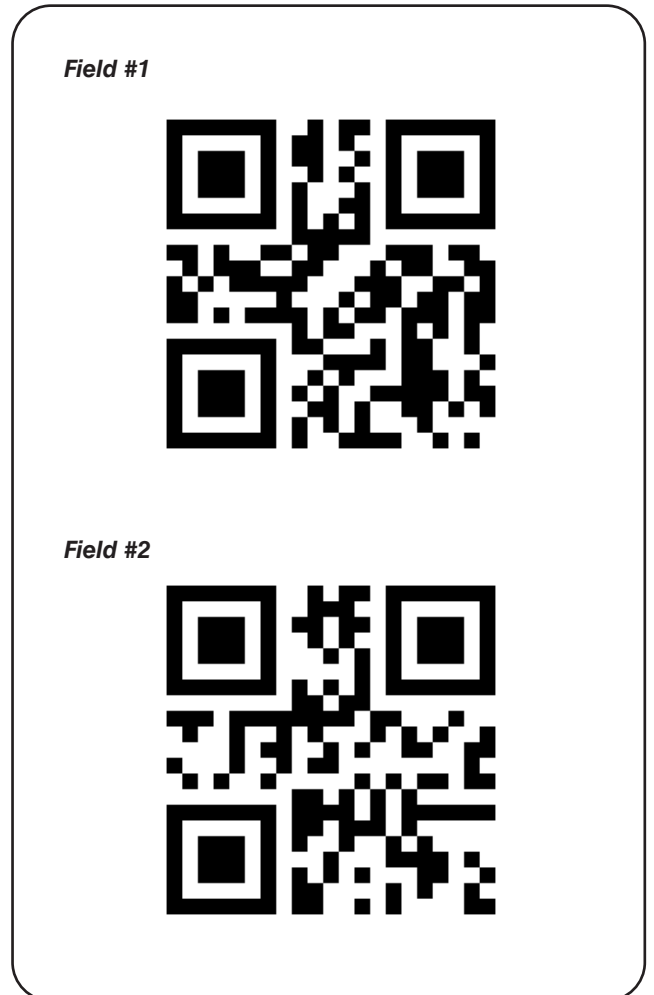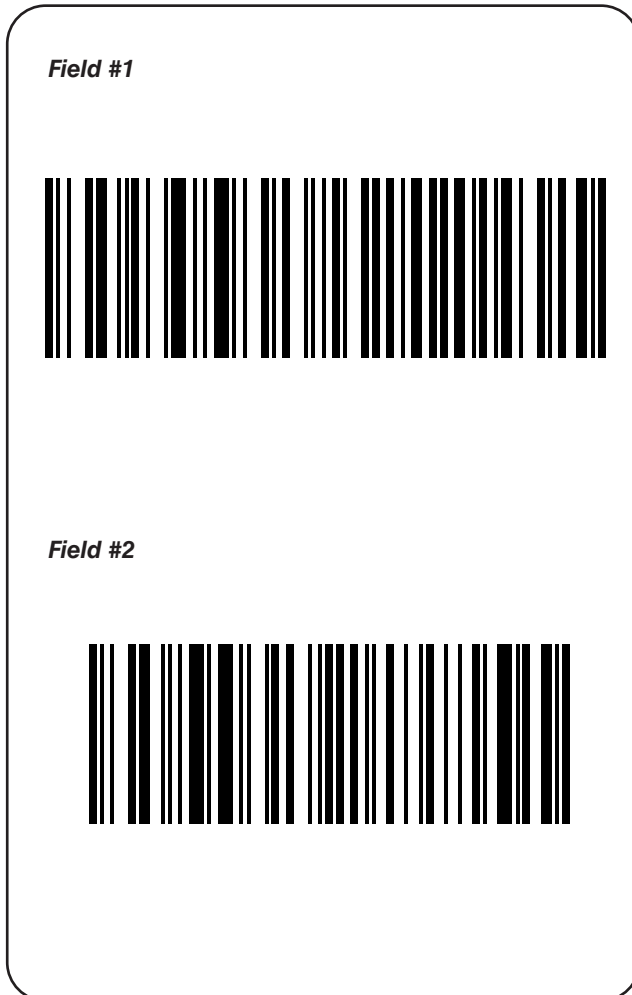

**Do you have questions you need answered right now?**

Call your nearest Cascade Service Department.

Visit us online at [www.cascorp.com](http://www.cascorp.com)

**AMERICAS**

**Cascade Corporation  
U.S. Headquarters**

2201 NE 201st  
Fairview, OR 97024-9718  
Tel: 800-CASCADE (227-2233)  
Fax: 800-693-3768

**Cascade Canada Inc.**

5570 Timberlea Blvd.  
Mississauga, Ontario  
Canada L4W-4M6  
Tel: 905-629-7777  
Fax: 905-629-7785

**Cascade México**

Almacén Dicex PDN  
Libramiento Noroeste  
4001 Km 27.5  
Parque Industrial Puerta del Norte  
Escobedo N.L 66050  
México  
Tel: 800-CASCADE (227-2233)

**Cascade Brasil**

Av. Casa Grande, 850  
Casa Grande, Diadema SP,  
09961-350  
Tel: +55 11 4930-9800

**Anval – Cascade Distributor**

Av. El Ventisquero 1225,  
Bodega 99,  
Renca – Santiago, Chile  
8661516  
Tel: +56 2 29516907

**EUROPE-AFRICA**

**Cascade Italia S.R.L.  
European Headquarters**

Via Dell'Artigianato 1  
37030 Vago di Lavagno (VR)  
Italy  
Tel: 39-045-8989111  
Fax: 39-045-8989160

**Cascade (Africa) Pty. Ltd.**

PO Box 625, Isando 1600  
60A Steel Road  
Sparton, Kempton Park  
South Africa  
Tel: 27-11-975-9240  
Fax: 27-11-394-1147

**ASIA-PACIFIC**

**Cascade Japan Ltd.**

2-23, 2-Chome,  
Kukuchi Nishimachi  
Amagasaki, Hyogo  
Japan, 661-0978  
Tel: 81-6-6420-9771  
Fax: 81-6-6420-9777

**Cascade Korea**

121B 9L Namdong Ind.  
Complex, 691-8 Gojan-Dong  
Namdong-Ku  
Inchon, Korea  
Tel: +82-32-821-2051  
Fax: +82-32-821-2055

**Cascade-Xiamen**

No. 668 Yangguang Rd.  
Xinyang Industrial Zone  
Haicang, Xiamen City  
Fujian Province  
P.R. China 361026  
Tel: 86-592-651-2500  
Fax: 86-592-651-2571

**Cascade India Material  
Handling Pvt Ltd**

Gat. No. 319/1 & 319/2, Village Kuruli,  
Taluka Khed, Pune 410 501  
Maharashtra, India  
Tel: +91 77200 25745

**Cascade Australia Pty. Ltd.**

36 Kiln Street  
Darra QLD 4076  
Australia  
Tel: 1-800-227-223  
Fax: +61 7 3373-7333

**Cascade New Zealand**

9 Blackburn Rd  
East Tamaki, Auckland  
New Zealand  
Tel: +64-9-273-9136

**Sunstream Industries Pte. Ltd. –  
Cascade Distributor**

18 Tuas South Street 5  
Singapore 637796  
Tel: +65-6795-7555  
Fax: +65-6863-1368

