


FK0654.eps

**0 OPERATOR'S POCKET GUIDE**

**C-Series Weigh Forks**

**INDICATOR FUNCTIONS**

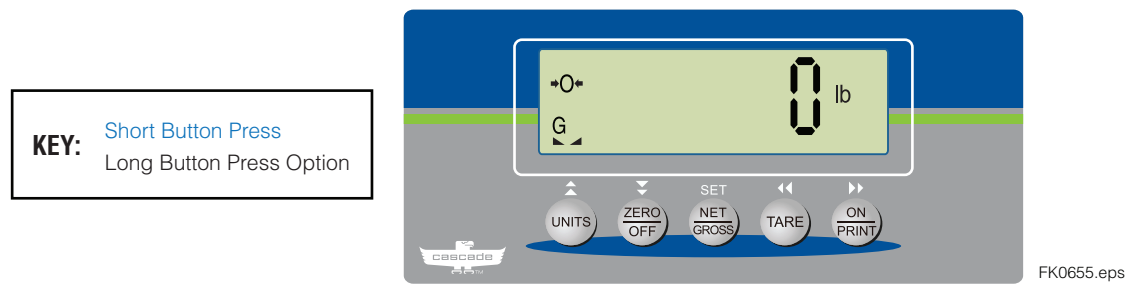

-   
 Toggle Units  
N/A
-   
 Zero  
Turn Indicator Off
-   
 Toggle between Gross & Net weight  
N/A
-   
 Establish or Cancel Tare Weight  
N/A
-   
 Print Weight  
Turn Indicator On

Manual Number 8305558-R1



**NOTE:** For more information on display functions, refer to the C-Series Weigh Forks User Manual 8305557.

**NO RIDERS**




**NO REACH THROUGH MAST**



**NO UNDER LOAD**




**LOAD HANDLING**

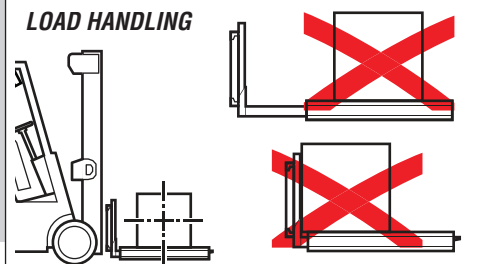

FK0139.eps

**2** Press the "ON/PRINT" button. Wait 5 seconds.

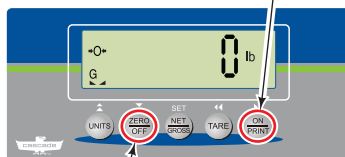


**3** Display will zero. If necessary, zero manually. Verify forks are free of obstacles prior to zeroing.

**Working temperature range:**  
 -4° F (-20° C) minimum  
 105° F (40° C) maximum

FK0652.eps

*The indicator can be toggled between lbs and kg. Refer to Indicator Functions section. Printer output is in units selected during calibration.*

**Preparing Mast for Weighing:**

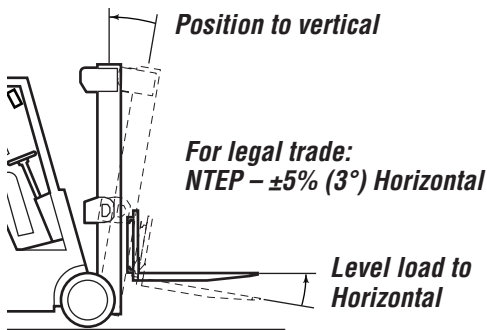


FK0140.eps


**IMPORTANT:**

- At initial daily start up, allow 3-5 minutes for the forks to warm up before weighing loads.
- The system will not weigh correctly if the front face or bottom of the forks touches the load and pallet.
- Unstable weight readings indicate debris between fork and fork shoe.
- When weighing liquids, more time is needed for indicator to show a steady weight.
- Do not exceed fork length by more than 6 in. (152 mm) with load length.


**1** Press the blue button on each battery pack

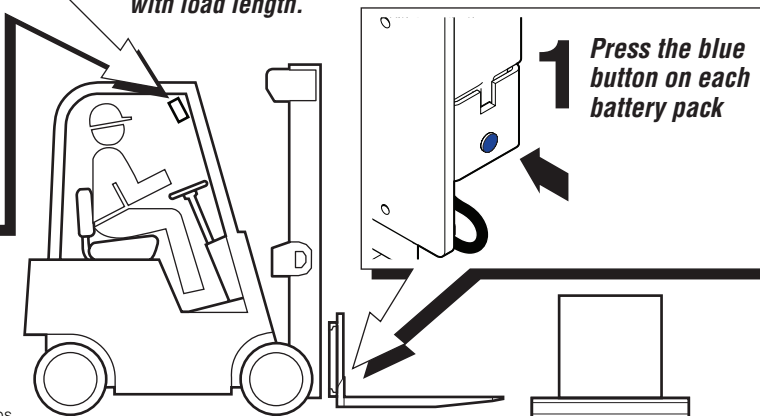

**4** Position load on forks, raise forks

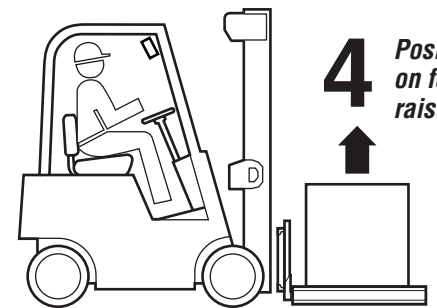

**5** Weigh load. Before next weighing, check zero point.

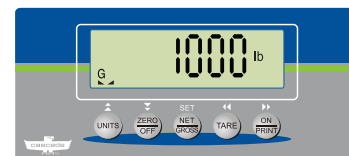

FK0653.eps