

guaranteeing the best performing clamp for your specific application.

Pad Adjustment Right & Left

3-finger stabilizer design

Six point adjustment for force distribution (Adjusta-Block)

Tunable Clamp Force Distribution

Handling

WGF Model

Left single articulating arm/ Right single articulating arm with Flexipads/ Adjusta-Blocks RH & LH







YES, with use of the Adjusta-Blocks

Loads at the tip, single and full depth for many different configurations

WGS Model


Left single articulating arm/ Right single articulating arm/ with shims RH & LH






YES, by adjusting the shims

Single and full depth heavy loads for general handling solutions

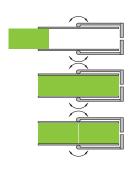



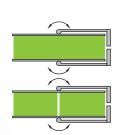



Cascade Corporation • PO Box 20187 • Portland, OR 97294-0187 • USA • 800 CASCADE (227.2233) • Tel 503.669.6257 • Fax 800.693.3768 • Fax 503.669.6367 Cascade Canada Ltd. • 5570 Timberlea Blvd. • Mississauga, Ontario L4W 4M6 • Canada • 800.380.2272 • Tel 905.629.7777 • Fax 905.629.7785

