




Installation Instructions

90FX Motor Guard Kit

This sheet provides instructions to install a motor guard. The guard protects the drive motor from being damaged when the clamp is in the bilge position.

- 1 Locate, drill and tap two 16 mm threaded holes in the faceplate. Use the dimensions shown and the guard as a template for the holes.
- 2 Install the guard to the backside of the faceplate using the capscrews and washers provided.

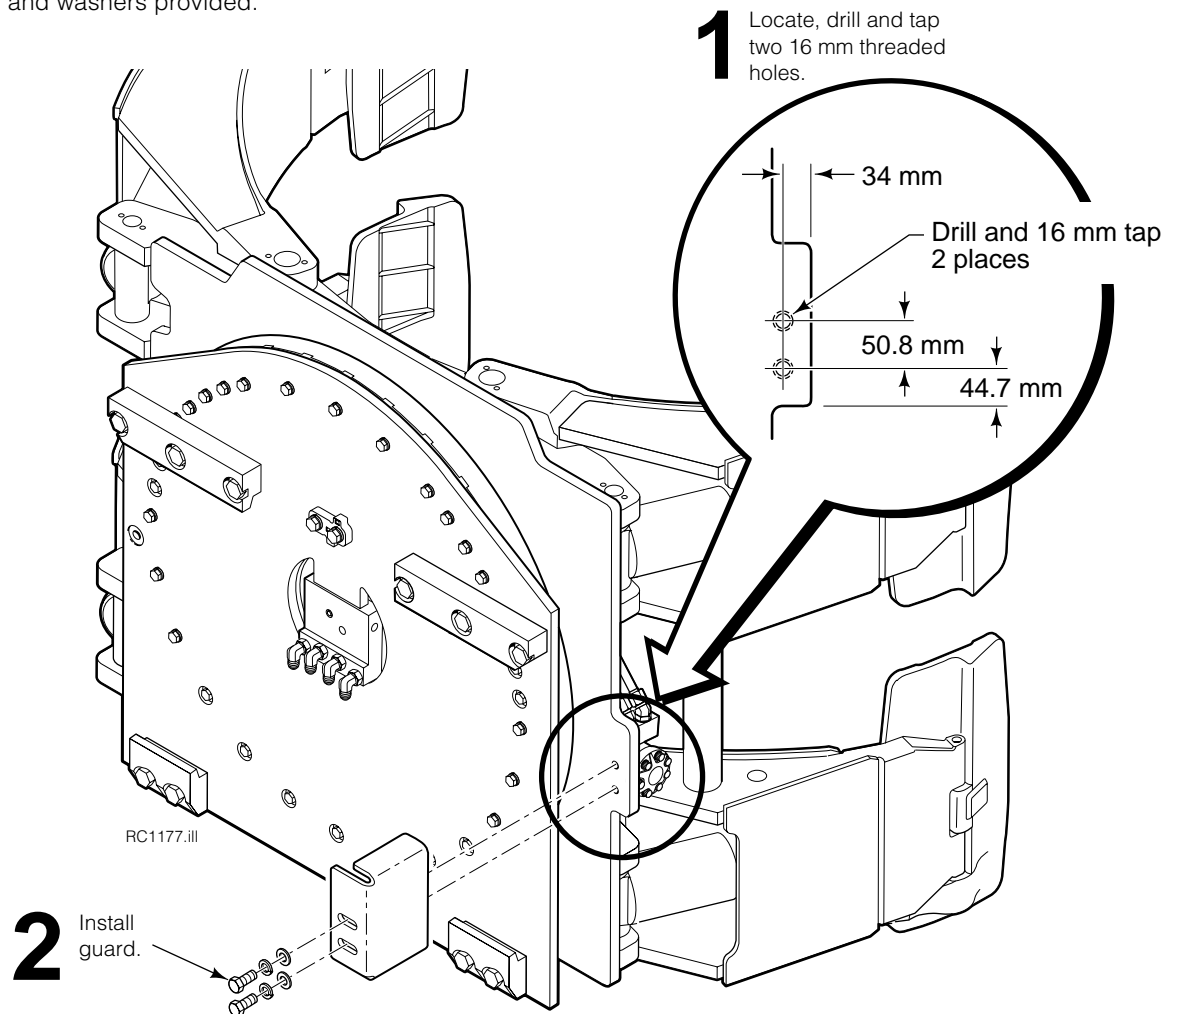

cascade®

For Technical Support . . .

Call: 1-800-CASCADE (227-2233)

OR

Write: Cascade Corporation, PO Box 20187, Portland, OR 97294-0187

© Cascade Corporation 2001

To Order Parts . . .

Call: 1-888-CASCADE (227-2233)

OR

Write: Cascade Corporation, 2501 Sheridan Ave., Springfield, OH 45505

5-2001

Part No. 6019448