



Technical Bulletin

Number 122
November 1982


Tip Handling Stop Block Kit 673041

Models: 20D, 35D and 60D Carton Clamps

Problem: In certain applications when clamping partial unit loads or loads that extend beyond the front edge of the contact pads, the clamping force at the front of the contact pads is not sufficient to securely clamp the load.

Solution: Install Service Kit 673041 which contains 4 stop blocks, required rivets and installation instructions.

1. Drill the upper and lower stabilizer stops on both arms with two 3/16" dia. holes. Hole locations are specified in the installation instructions.
2. Fasten the stop blocks to the stabilizer stops with the rivets provided.

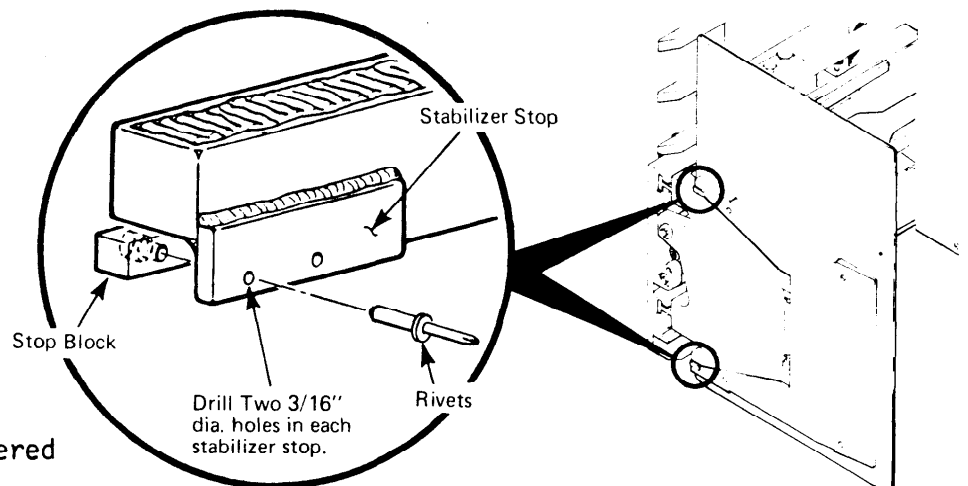

The Service Kit can be ordered
by contacting:

Cascade Corporation Parts Depot
2501 Sheridan Ave.
Springfield, Ohio 45505
Telephone: (513) 322-1199
Telex: 205413

Note: This information should not be interpreted as the basis for warranty claims unless so designated.

cascade[®]
corporation

P.O. Box 20187 • Portland, Oregon 97220 • (503) 666-1511
P.O. Box 360 • Springfield, Ohio 45505 • (513) 325-9271

Do you have questions
you need answered
right now?

Dial Directline
800 227-2233
 toll free