



Parts Manual

Model _____ **Sideshifter**

Serial Number _____ **60E-SSS-277**

cascade[®]


For Technical Assistance and to Order Parts . . .

Call: 1-800-CASCADE or 503-669-6300

OR

Write: Cascade Corporation, P.O. Box 20187, Portland, OR 97220


Publications

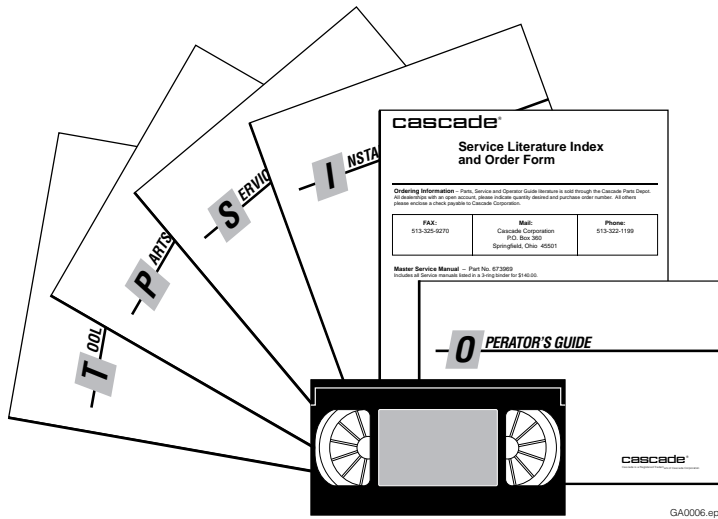

GA0006.eps

60E Sideshifter	
PART NO.	DESCRIPTION
	Parts Manual
205849	Service Manual
205124	Operator Guide
205125	Installation Instruction
679929	Tool Catalog
673964	Literature Index Order Form

Sideshifter Assembly

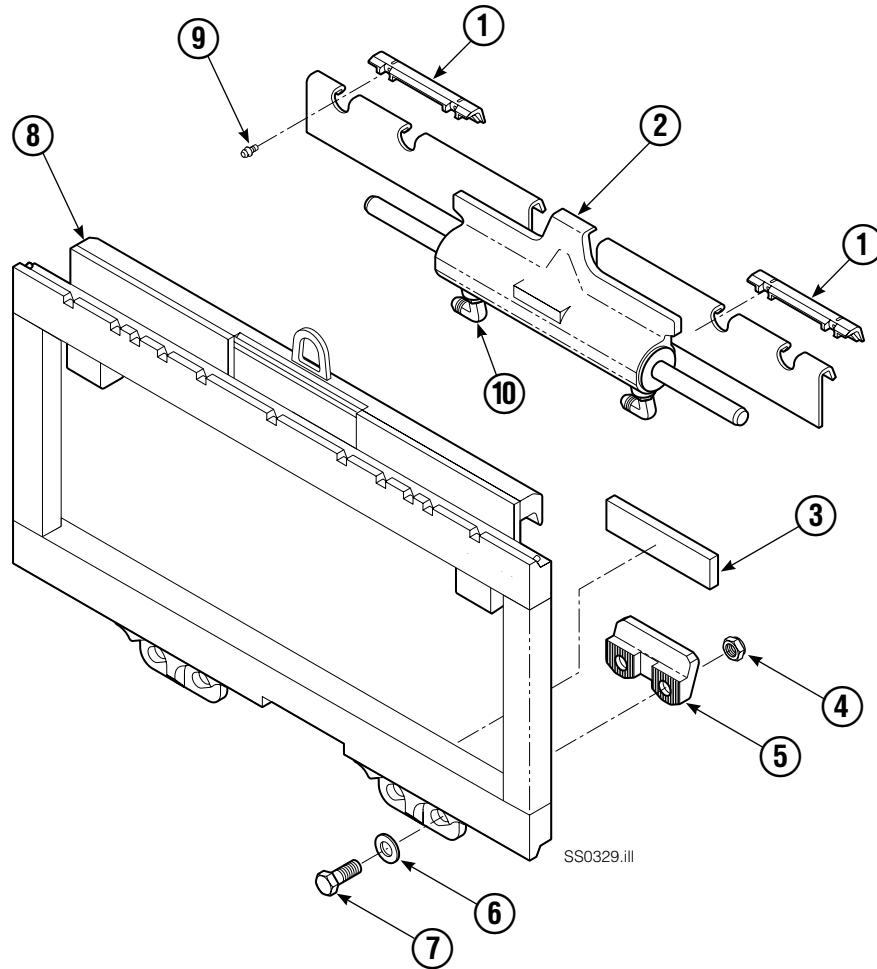

60E			
REF	QTY	PART NO.	DESCRIPTION
1	2	672018	Upper Bearing
2	2	583973	Cylinder Assembly ●
3	2	208350	Lower Bearing
4	4	553857	Nut ▲
5	2	204186	Lower Hook ▲
6	4	667225	Washer ▲
7	4	639121	Capscrew, 5/8 NCx1.50 GR5 ▲
8	1	4017-130	Frame
9	2	7403	Grease Fitting
10	2	601676	Fitting, 6-6 ■

● See Cylinder page for parts breakdown.


▲ Included in Lower Hook Group 204182.

■ Included in Fitting Group 204179.

★ If frame needs replacing, order complete Sideshift Assembly.

Reference: Common Parts Group 373180, 365329.

Cylinder

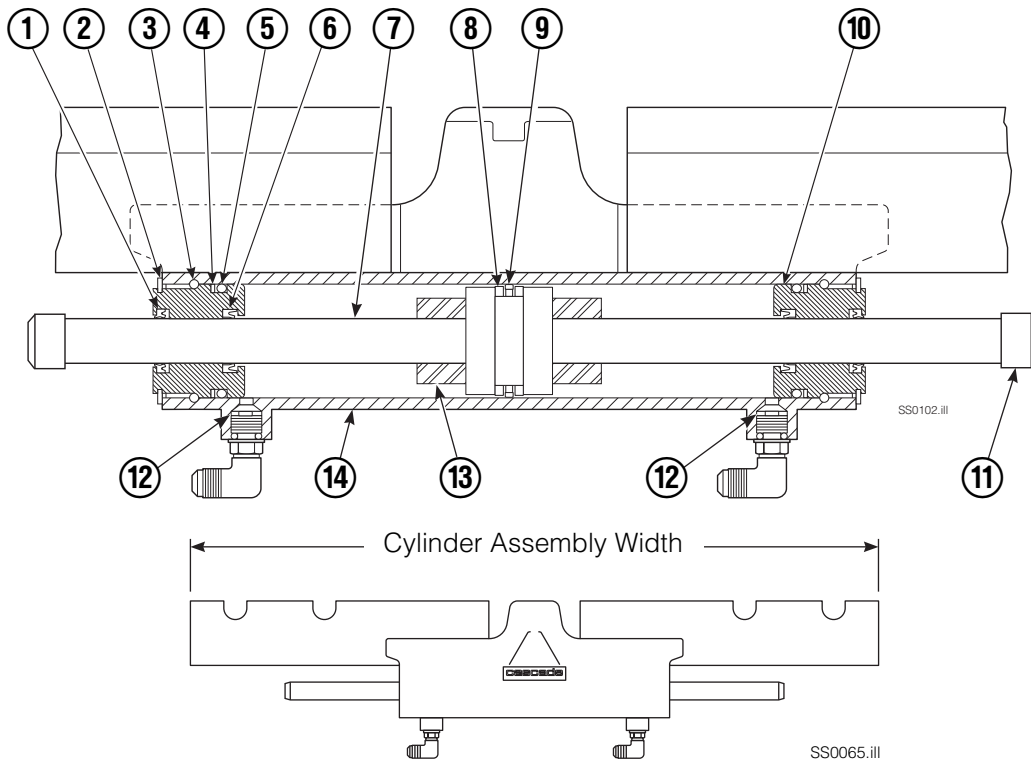

REF	QTY	55E PART NO.	60E PART NO.	100E PART NO.	DESCRIPTION
		205848	—	—	Cylinder Assembly, 24.4 in. (620 mm)
		205840	—	—	Cylinder Assembly, 26.2 in. (665 mm)
		205841	—	—	Cylinder Assembly, 28.9 in. (735 mm)
		205842	—	—	Cylinder Assembly, 31.9 in. (810 mm)
		—	583970	—	Cylinder Assembly, 34.1 in. (865 mm)
		205845	—	—	Cylinder Assembly, 35.2 in. (895 mm)
		—	583971	584001	Cylinder Assembly, 36.0 in. (915 mm)
		205847	—	—	Cylinder Assembly, 38.3 in. (975 mm)
		205843	—	—	Cylinder Assembly, 40.1 in. (1040 mm)
		—	583972	584002	Cylinder Assembly, 40.2 in. (1020 mm)
		205846	—	—	Cylinder Assembly, 45.1 in. (1145 mm)
		—	583973	—	Cylinder Assembly, 48.0 in. (1220 mm)
		—	—	584003	Cylinder Assembly, 48.1 in. (1220 mm)
		206370	—	—	Cylinder Assembly, 48.8 in. (1240 mm)
		205844	—	—	Cylinder Assembly, 52.0 in. (1320 mm)
		—	—	584004	Cylinder Assembly, 55.2 in. (1400 mm)
● 1	2	562131	562131	564408	Wiper Seal
2	2	562951	562951	3154	Snap Ring
3	2	562942	562942	564403	Retaining Ring
● 4	2	563388	563388	615131	Back-Up Ring
● 5	2	562127	562127	2789	O-Ring
● 6	2	562132	562132	564406	Rod Seal
7	1	562055	562055	564401	Rod
● 8	2	563278	563278	564404	Bearing Ring
● 9	1	564141	564141	564407	Piston Seal
10	2	562792	562792	564402	Retainer
● 11	2	208378	208378	—	Rod End Cap
12	2	564226	564226	564226	Speed Control Washer
13	2	—	—	—	Spacer
14	—	■	■	■	Cylinder Shell
		563487	563487	564409	Service Kit

● Included in Service Kits 563487 (55E & 60E) and 564409 (100E).

■ Not serviceable, order new cylinder assembly. Reference: S-3816, S-4019, S-4060, S-6105.

Do you have questions you need answered right now? Call your nearest Cascade Parts Department.

Cascade Corporation
2501 Sheridan Avenue
Springfield, OH 45505
Tel: 888-CASCADE (227-2233)
FAX: 888-329-0234

Cascade Canada Inc.
5570 Timberlea Blvd.
Mississauga, Ontario
Canada L4W-4M6
Tel: 905-629-7777
FAX: 905-629-7785

Cascade GmbH
D-41 199 Monchengladbach
Klosterhofweg 52
Germany
Tel: 21-66-602091
FAX: 21-66-680947

Cascade Finland
01370 Vantas
Finland
Tel: 358-0-836-1925
FAX: 358-0-836-1935

**Cascade N.V.
European Headquarters**
P.O. Box 3009
1300 El Almere
Damsluisweg 56
1332 ED Almere
The Netherlands
Tel: 31-36-5492911
FAX: 31-36-5492964

**Cascade N.V.
Benelux Sales and Service**
P.O. Box 3009
1300 El Almere
Damsluisweg 56
1332 ED Almere
The Netherlands
Tel: 31-36-5492950
FAX: 31-36-5492974

Cascade (UK) Ltd.
15, Orgreave Crescent
Dore House Industrial Estate
Handsworth
Sheffield S13 9NQ
England
Tel: 742-697524
FAX: 742-695121

**Cascade Scandinavia
Hydraulik A.B.**
Muskötgatan 19, E8-9
S25466 Helsingborg
Sweden
Tel: 42-151135
FAX: 42-152997

Cascade Norway
Østerliveien 37A
1153 Oslo
Norway
Tel: 47-22-743160
FAX: 47-22-743157

Cascade France S.A.R.L.
11, Rue Jean Charcot
Zone Industrielle Sud or
B.P. 22
91421 Morangis Cedex
France
Tel: 1- 64547501
FAX: 1-9790584

Cascade Hispania S.A.
Avenida De La Fabregada, 7
Hospitalet De Llobregat
Barcelona
Spain
Tel: 3-335-5158
FAX: 3-335-4756

Cascade Japan Ltd.
5-5-41,
Torikai Kami
Settsu, Osaka
Japan, 566
Tel: 81-726-53-3490
FAX: 81-726-53-3497

Cascade Korea
Room 508, Pum Yang Bldg.
750-14, Bang Bac-Dong
Se-Cho Ku, Seoul
Korea
Tel: 2599-7131 ext. 512
FAX: 2533-8089

HYCO-Cascade Pty. Ltd.
1445 Ipswich Road
Rocklea,
Queensland 4107
Australia
Tel: 3-274-2722
FAX: 3-274-3456

HYCO-Cascade (NZ) Ltd.
15 Ra Ora Drive, East Tamaki
P.O. Box 38-440
Howick, Auckland
New Zealand
Tel: 9-273-9136
FAX: 9-273-9137

Cascade (Africa) Pty. Ltd.
P.O. Box 625, Isando 1600
60A Steel Road
Sparton, Kempton Park
South Africa
Tel: 975-9240
FAX: 394-1147

Cascade-Xiamen
Wanshan No. 1 Workshop
Huli Road
Xiamen 361006
Fujian, PRC
Tel: 592-562-4600
FAX: 592-562-4671

**Cascade (Singapore)
Trading Co.**
Four Seasons Park
Autumn Block - Apt. 1802
12 Cascaden Walk
Singapore
Tel: 65-834-1935
FAX: 65-834-1936

