



Technical Bulletin

Number 139


March 1984

D-Series Clamp Arm Bar Lubrication

Bearing life expectancy is increased by addition of lubricant to arm bearing surfaces. Prepare the surfaces and apply lubricant as follows:

- 1 Fully extend the arms to expose the bearing surfaces. Inspect the shaded area and rear face of the arm carrier for any burrs, nicks or sharp edges. Remove all burrs and smooth nicks with emery paper. Clean all surfaces thoroughly with solvent and allow to dry completely.
- 2 Apply a coating of lubricant to the shaded surfaces. Cascade recommends lubricants as follows:

Application	Lubrication
General Applications	Chassis Lube with Moly
Food Industry Applications	DuBois FGG-2
Dry Lube Applications	Slip Plate #3 (Superior Graphite)

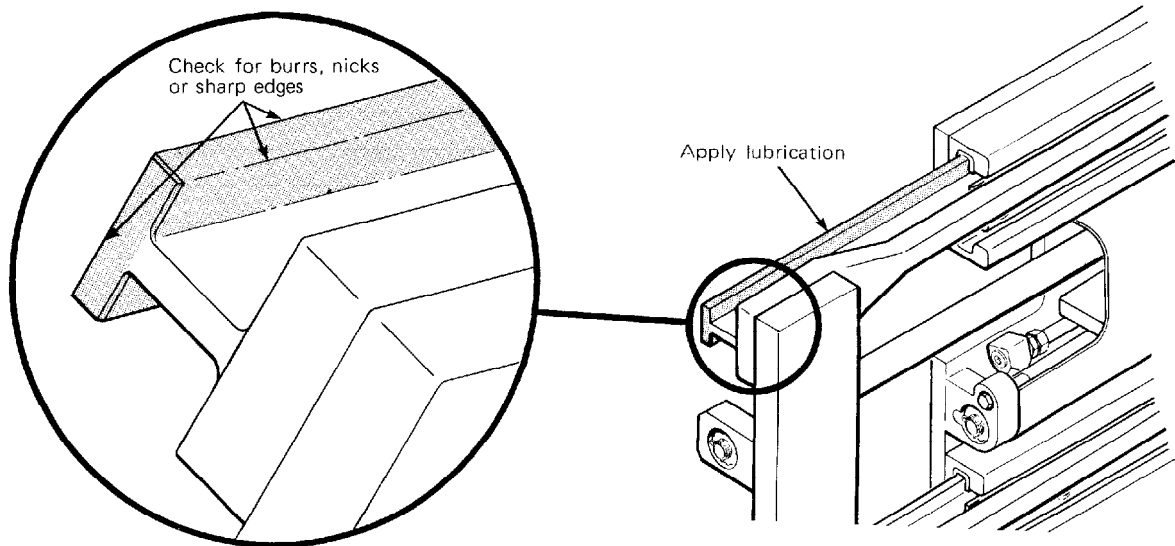

Note: This information is not to be interpreted as the basis for warranty claim unless previously authorized by Cascade Service Representative.

Part Number 674443

cascade[®]
corporation

P.O. Box 20187 • Portland, Oregon 97220 • (503) 666-1511
P.O. Box 360 • Springfield, Ohio 45505 • (513) 325-9271

Do you have questions
you need answered
right now?

Call Direct line
800-377-2233
3:00 PM - 5:00 PM